

COLDROOM-FRAME MANUAL

SFV DOORS *(without metal profiles from the factory)*

COLDROOM FRAME

Version 1.0 - July 2026



Clear Vision Cooling

Table of Contents

03

Tools

Which tools are used to clear the job.

04

Components

List of components delivered by us.

05

Metal profiles

Instructions about the metal profiles provided by the customer.

07-08

Bottom & Top Rail

Instructions to place the bottom and top rail in the cell frame.

09-12

Doors & Finishing touches

Instructions to place the SFV Doors and add the finishing touches to the cell frame.


13

Door Handles

Instructions to place door handles on the SFV Doors.




LIST OF RECOMMENDED Tools

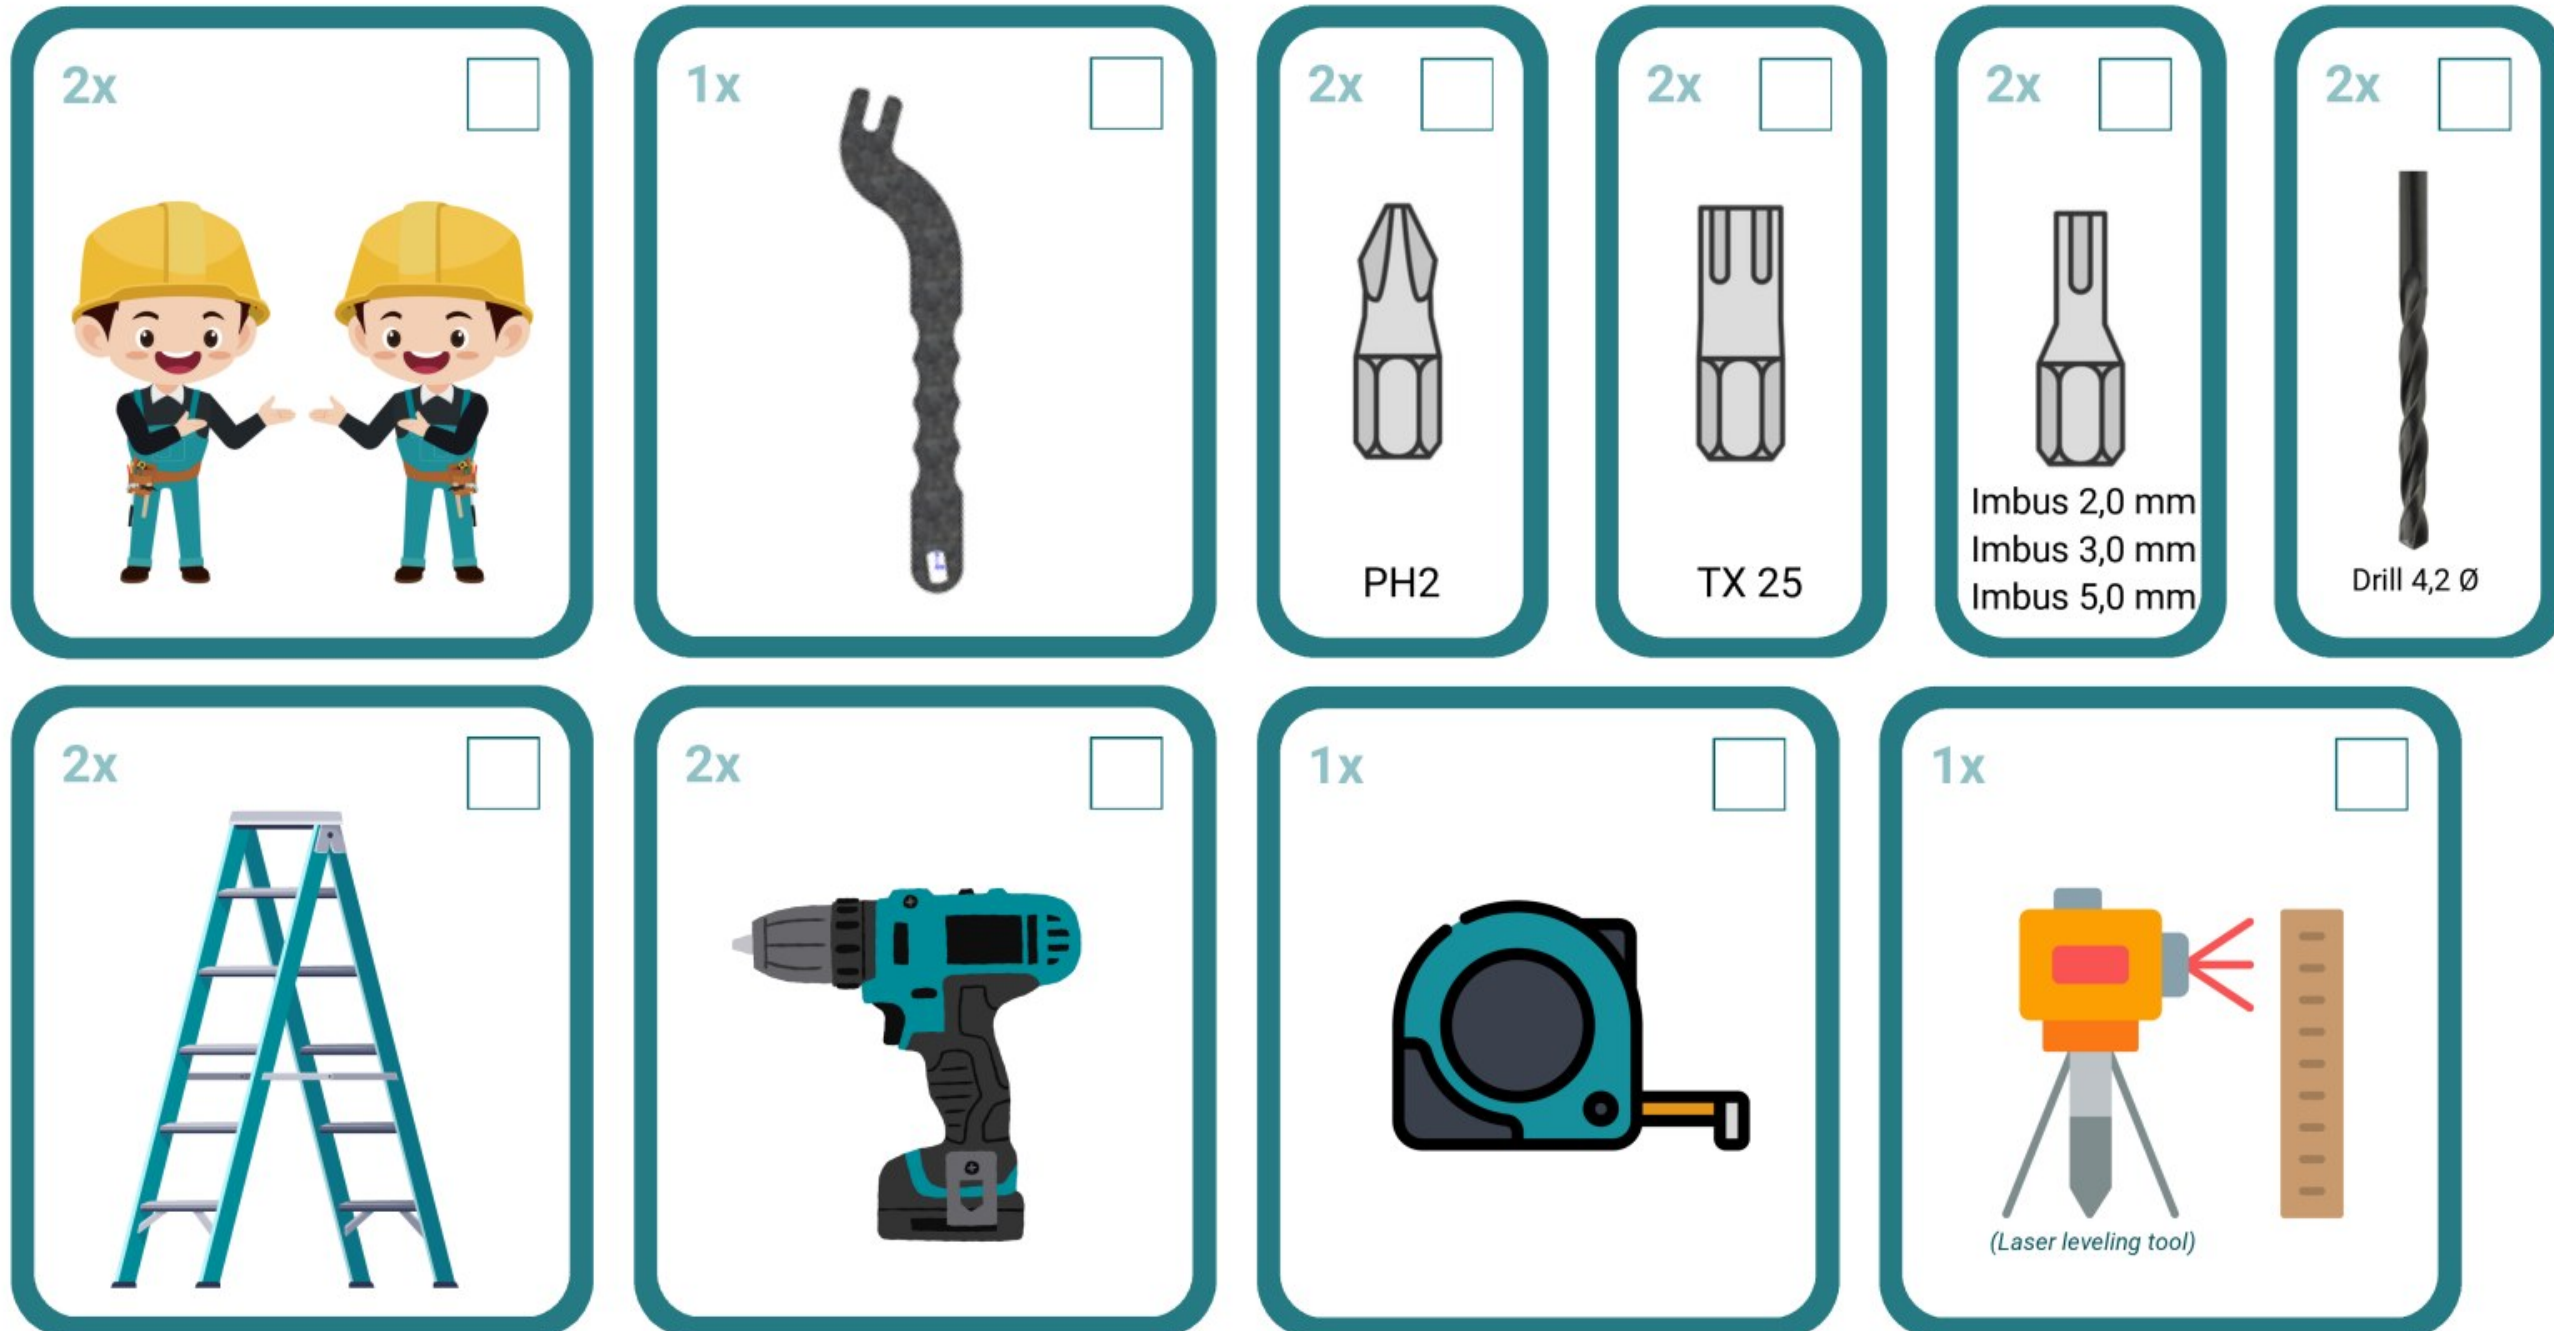

LIST OF COMPONENTS

5 Doors Frame

Assembled Top - Rail profile
With Hinge pin Holders

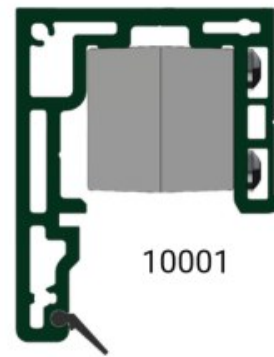


1x

(Checkmark square)

☐

Assembled Bottom - Rail profile
With Hinges

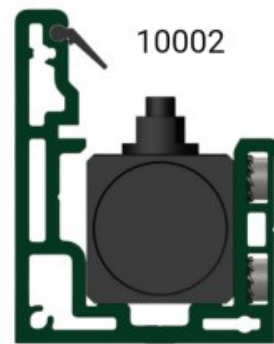

1x

☐

10003

ISO 7380-2, M4 x 8, Torx T20, A2
Stainless Steel

20 x

☐

CVC Hinge Doors - Semi Vertical -
Door LEFT



10004

5 x

☐

Click Handle




10005

5 x

☐

Coated Cover profiles Bottom & Top

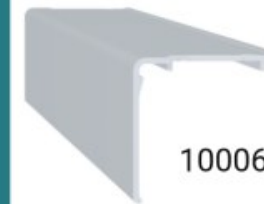


10006

4x


☐



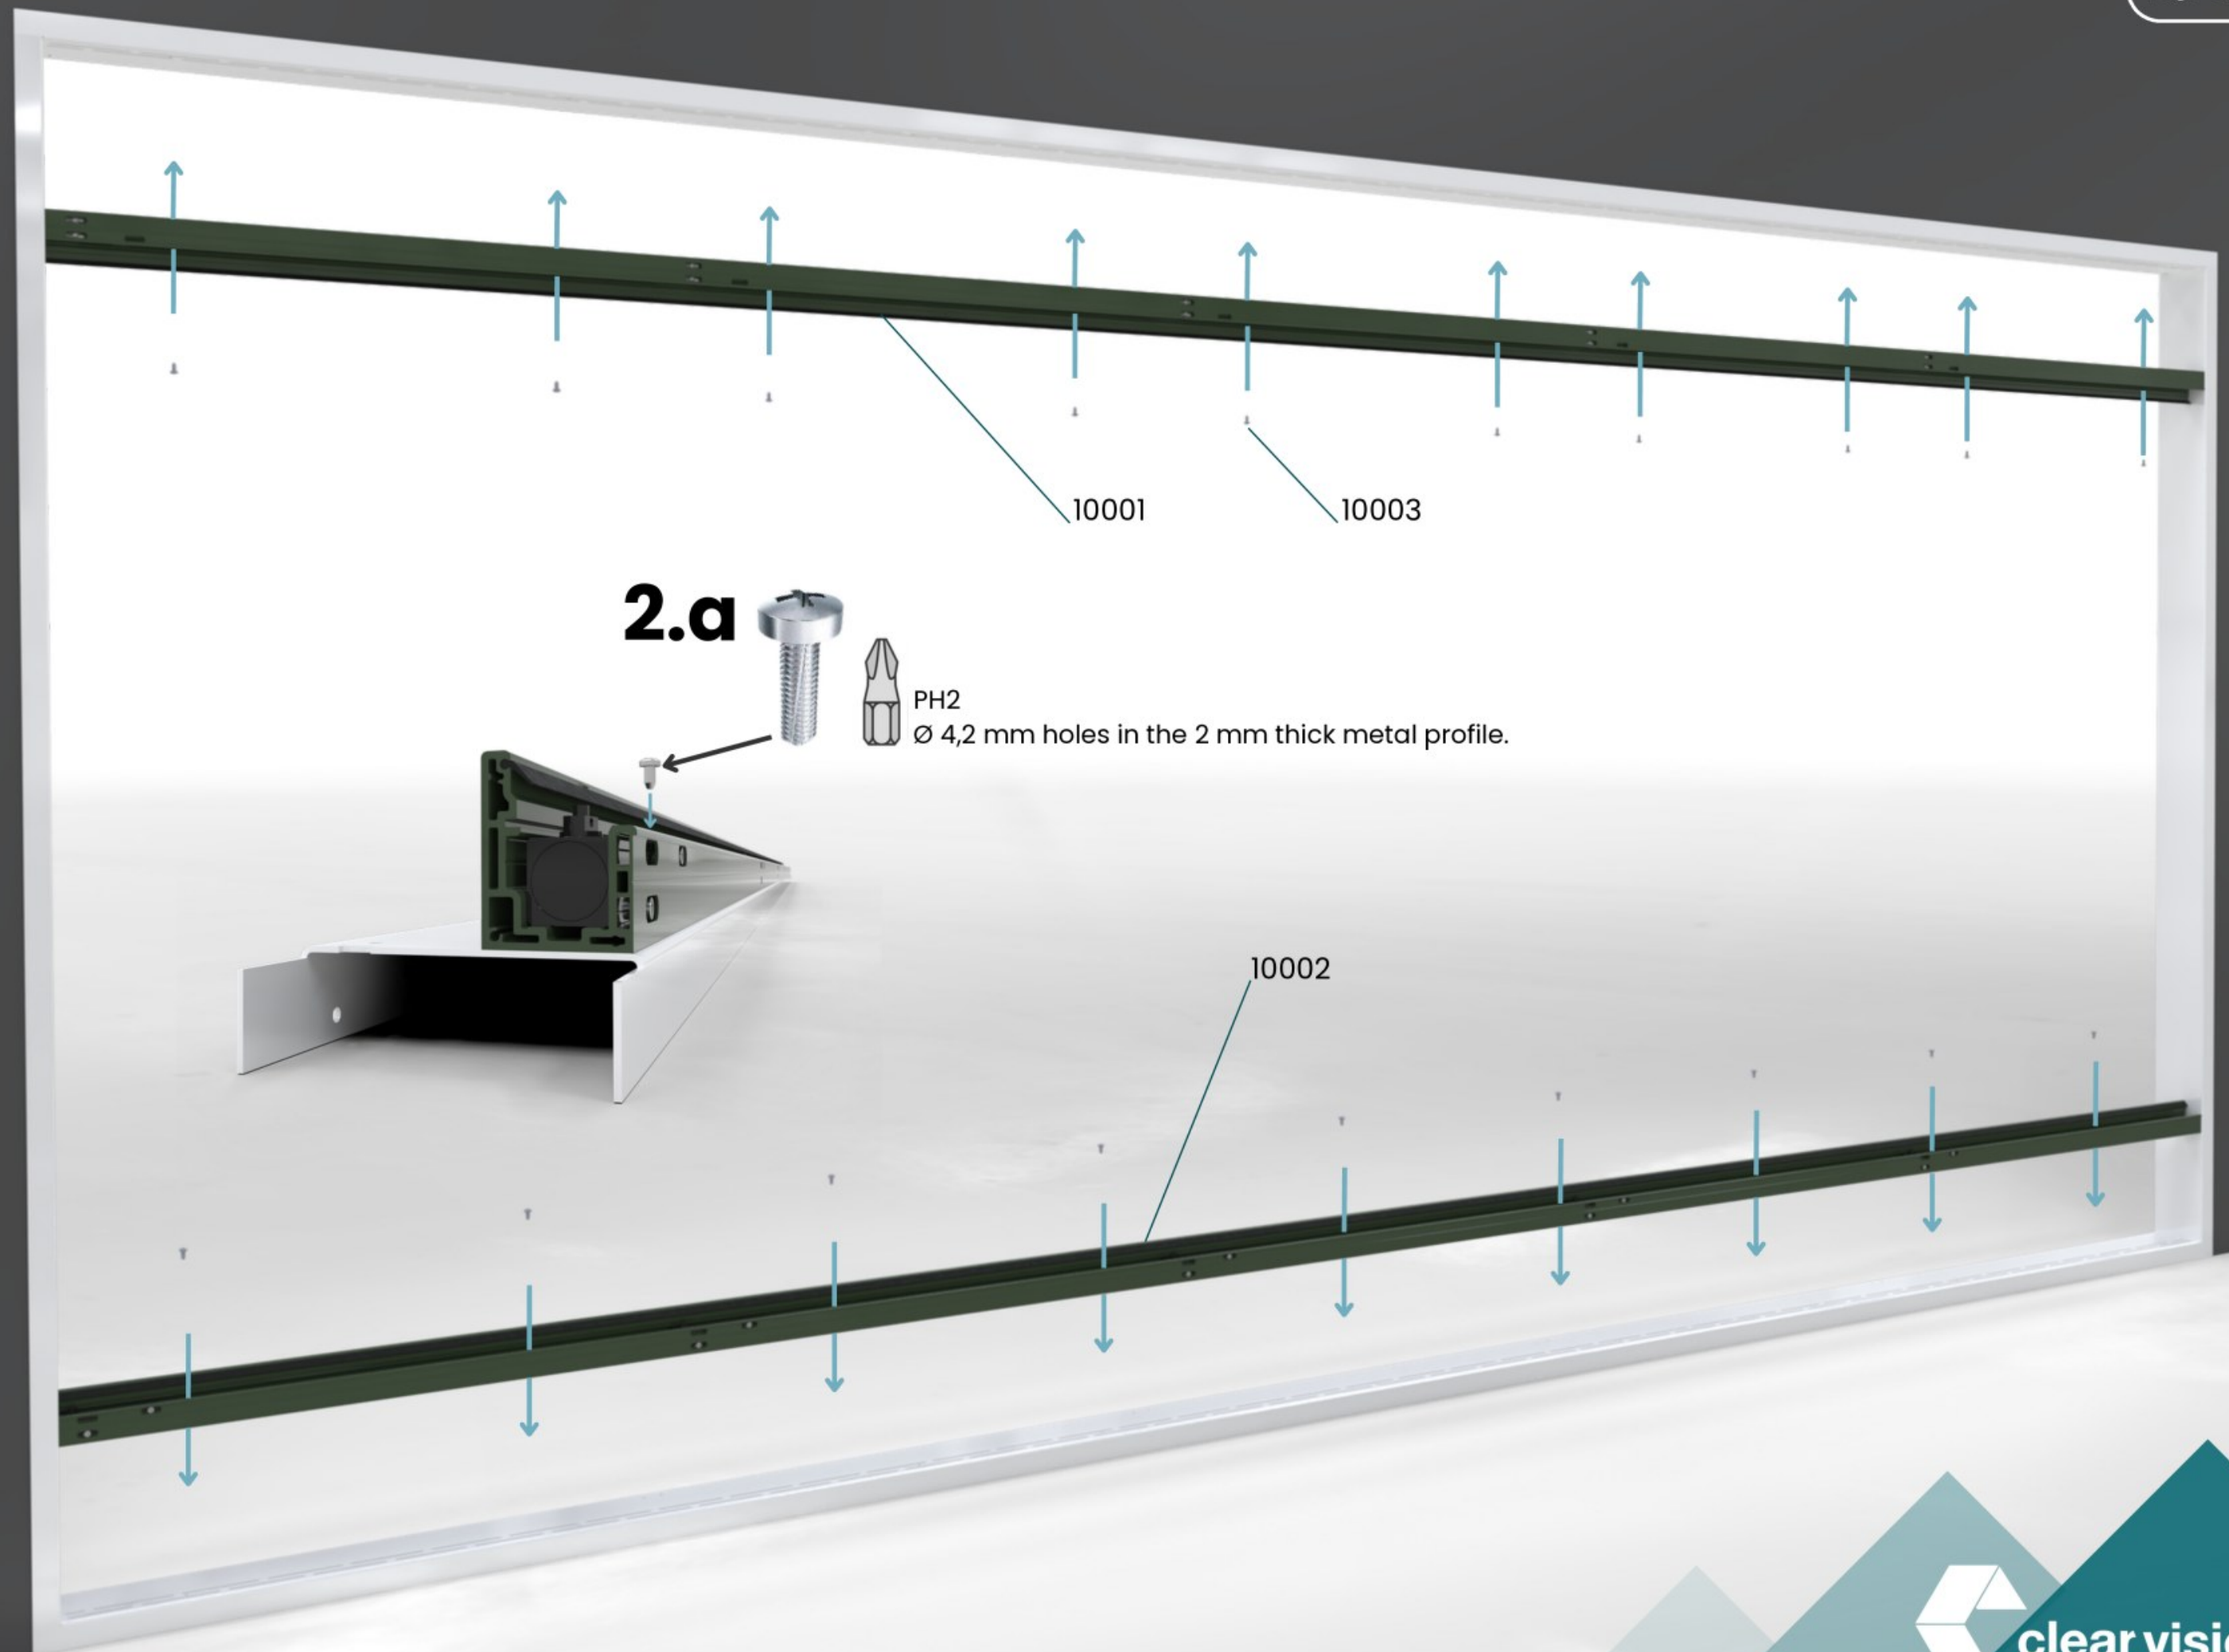


2.b

3.a

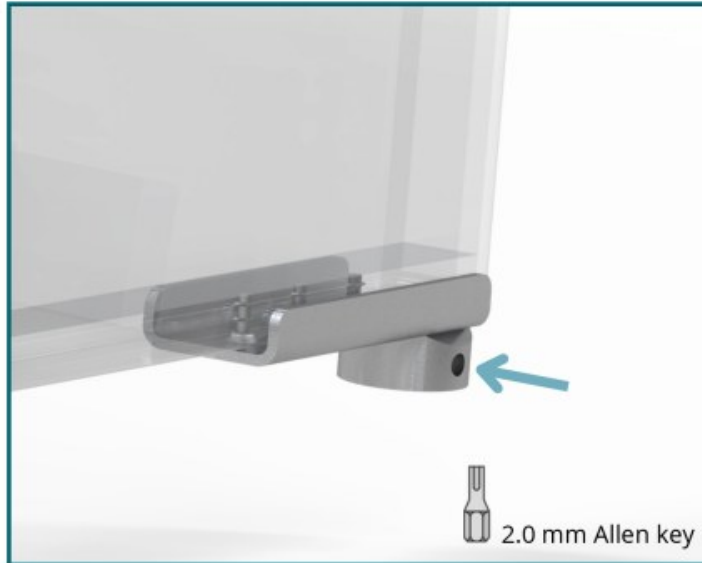


- 1 Loosen the bottom hinge **set screw**.
If the set screw is threaded in too far, it may interfere with the door installation.
- 2 **Rotate** the bottom hinge to the **open** position using the supplied **tool** before installing the door.

Closed

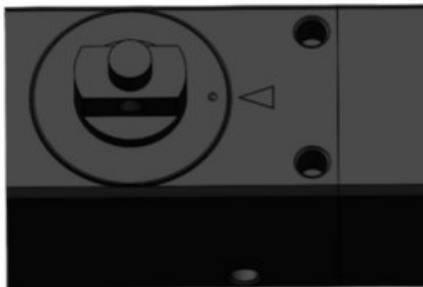

Open

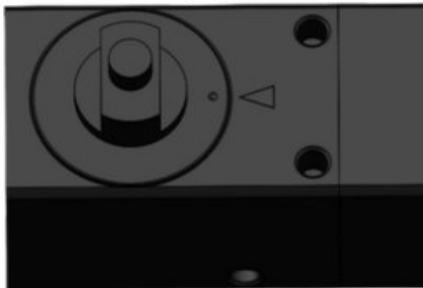


Tool




3.b




3.c

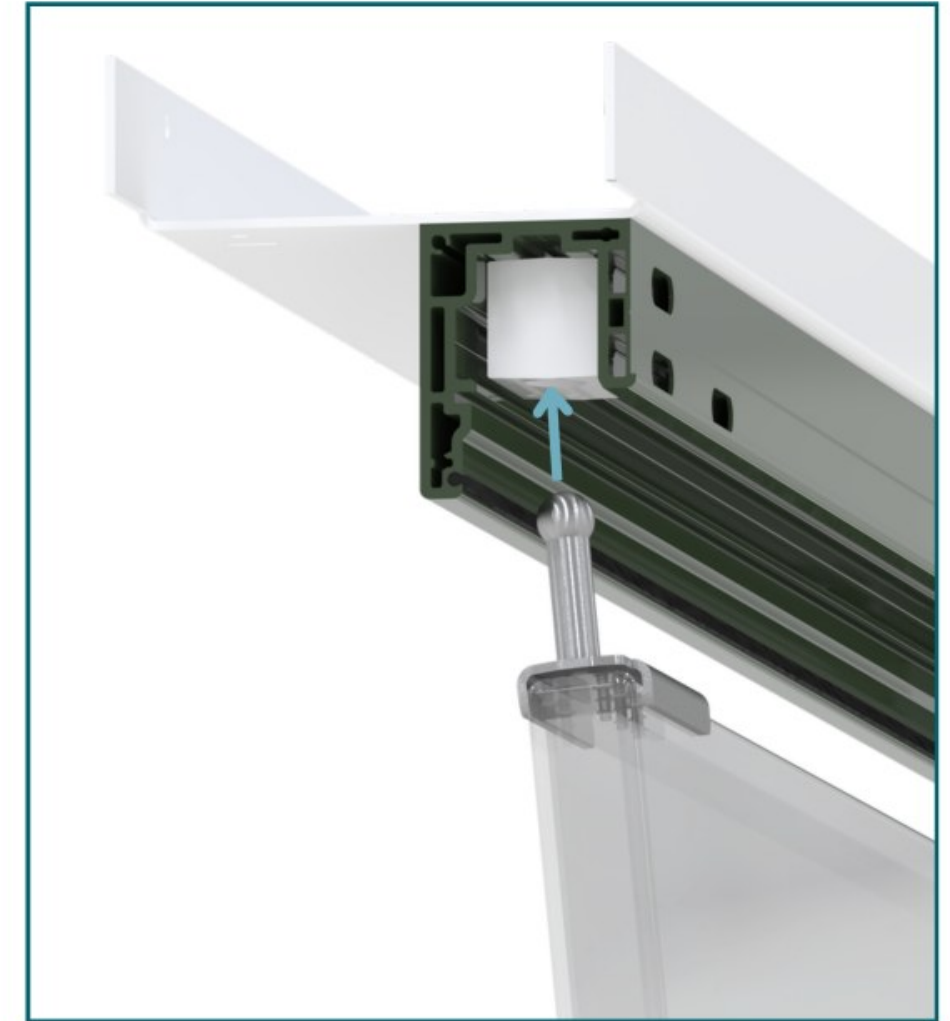

3.d

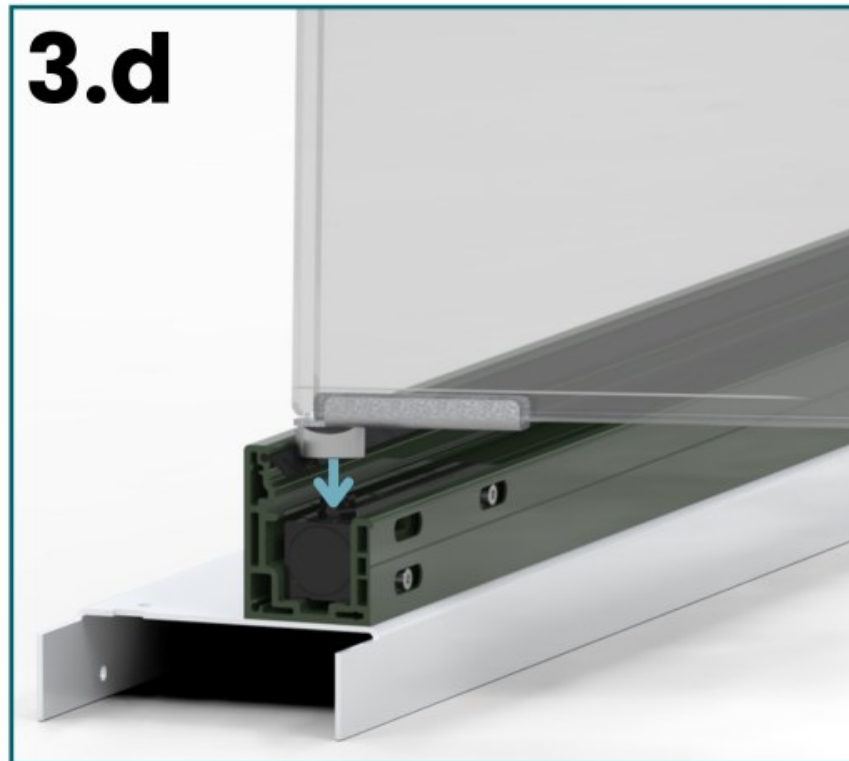


3.e

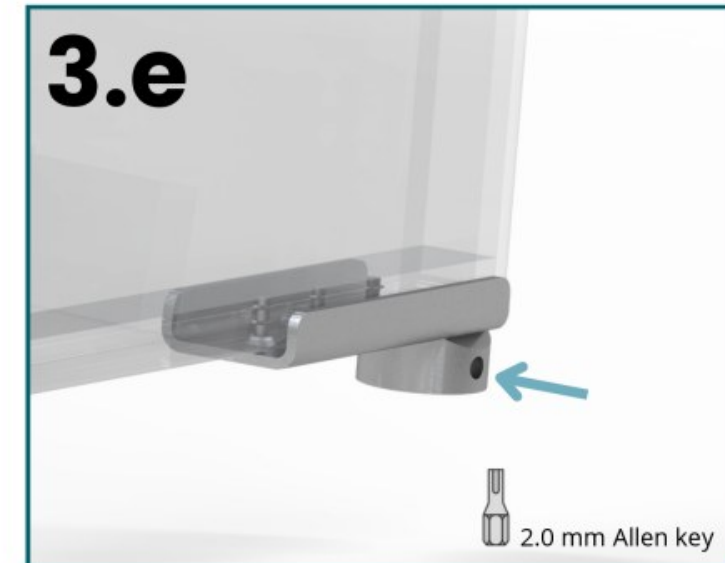Lock the bottom hinge **set screw**.

3.f

3.g




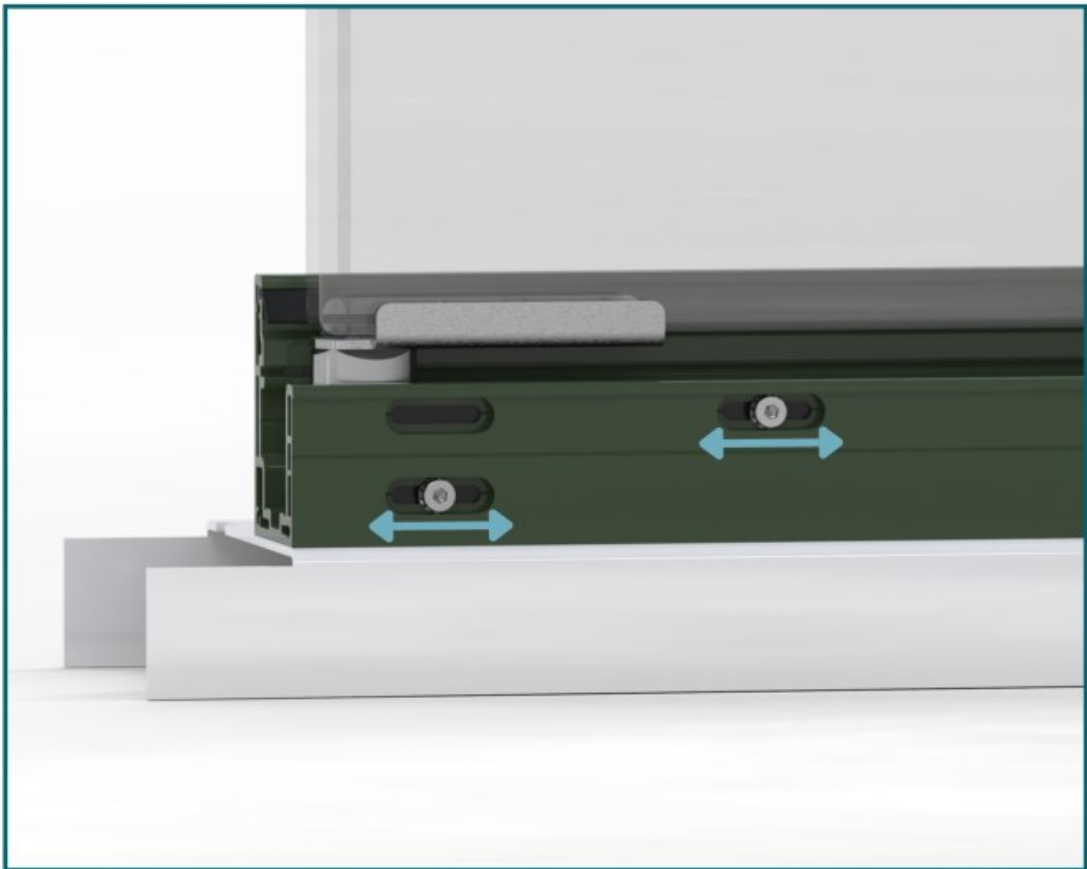


Adjust the top and bottom profiles until both doors are perfectly **aligned**.

- 1. Adjust the top profile using the slotted holes.
- 2. Adjust the bottom profile using the slotted holes.
- 3. Ensure the top edges of both doors are level and aligned.



4.a

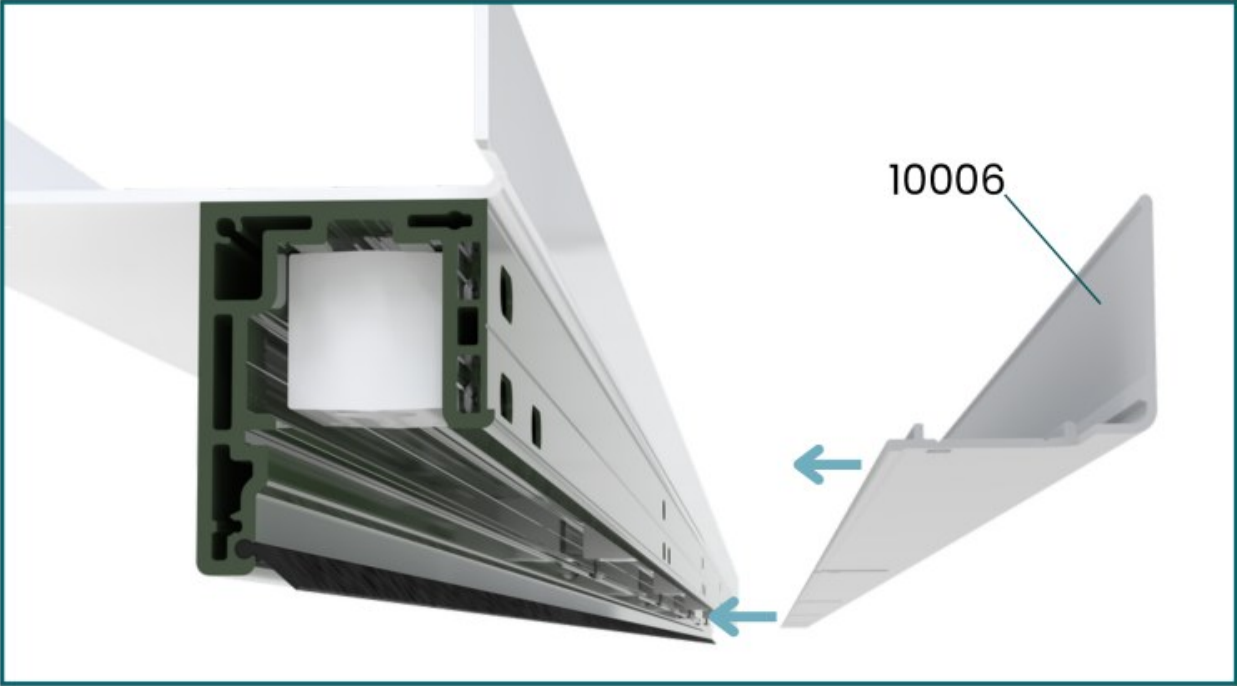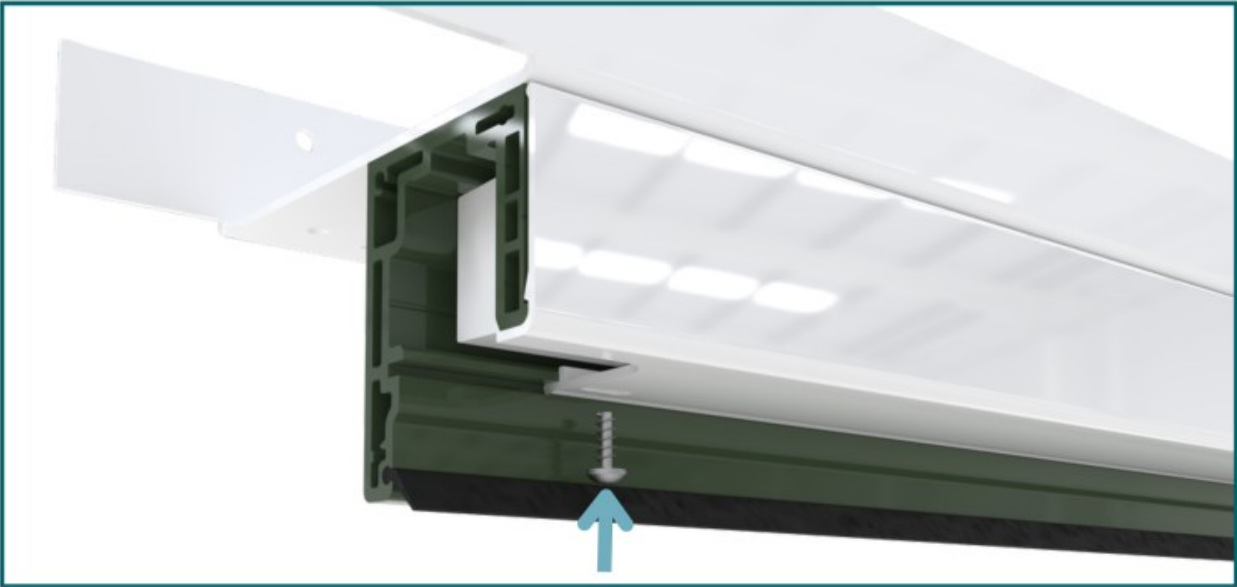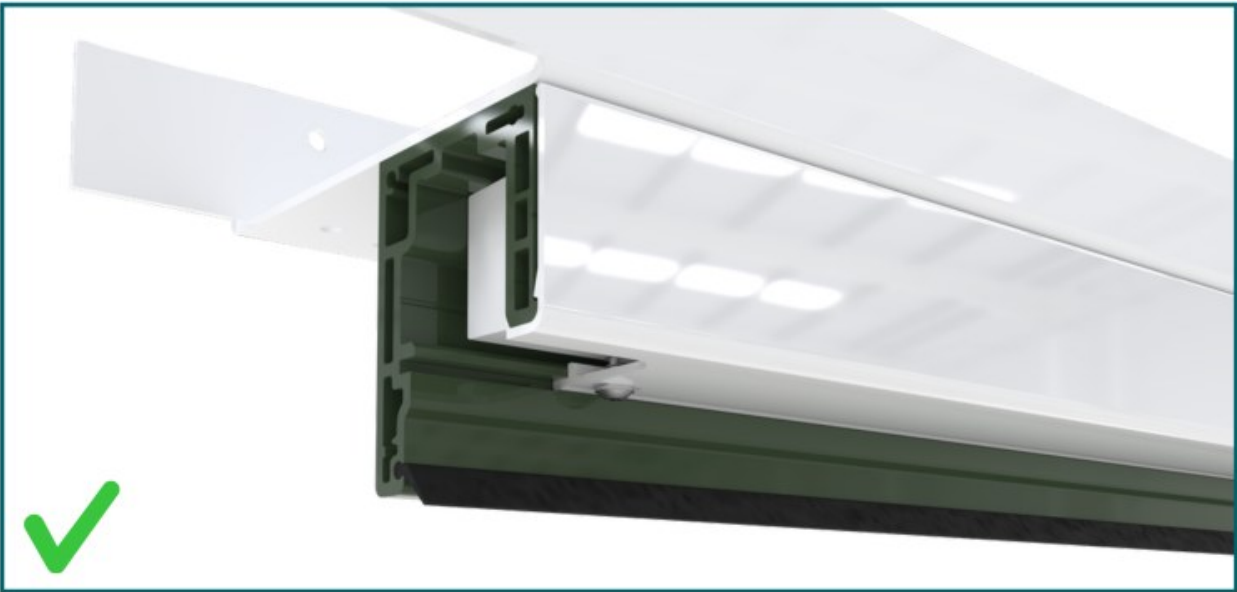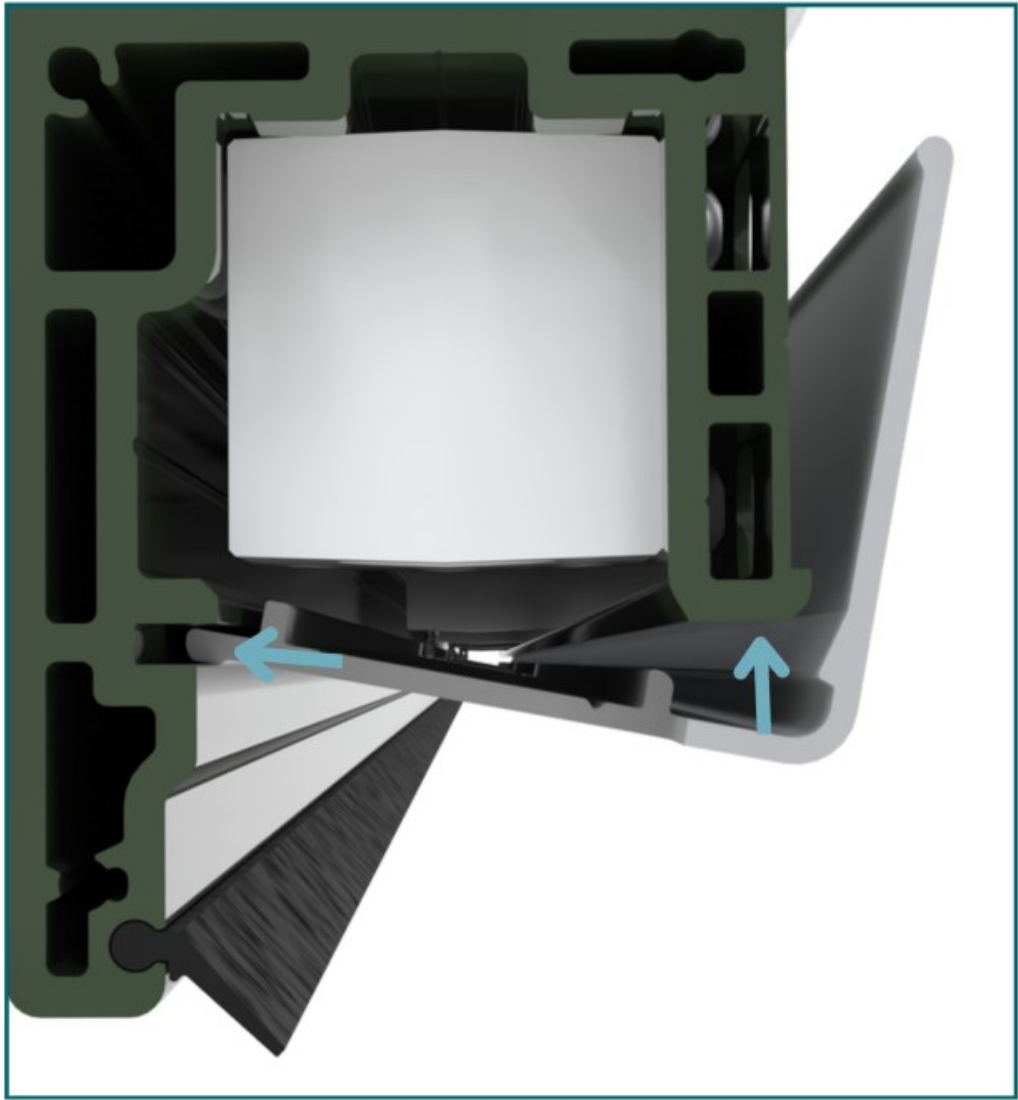

4.b



